


KERICK FLOAT VALVE GENERAL INSTALLATION INSTRUCTIONS

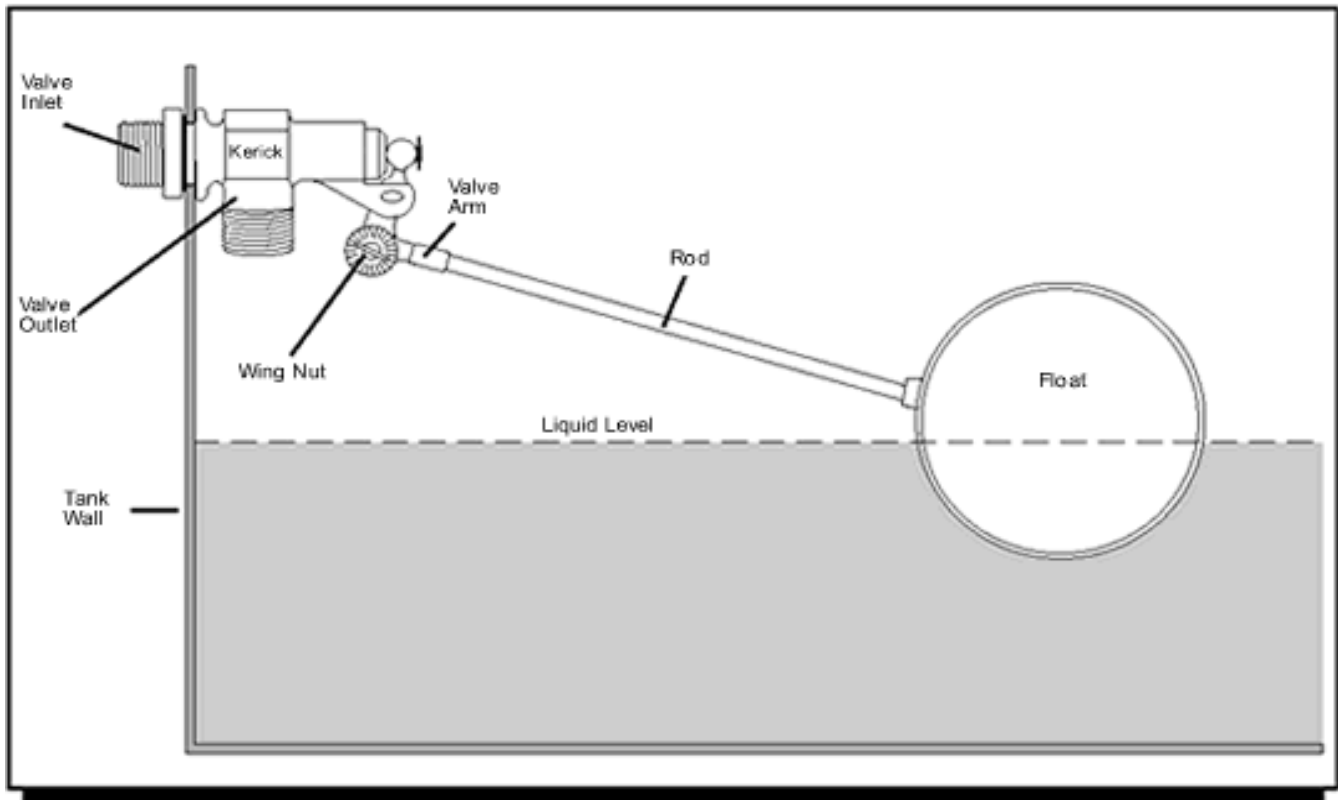

1. Attach valve to tank wall and connect valve inlet to supply line.
2. Position valve outlet 90° to liquid level to avoid binding.
3. Attach rod and float to valve arm. Check for smooth operation.
4. Adjust valve arm and rod for desired liquid level control.
 - Increasing level shuts valve off.
 - Decreasing level opens valve.
5. Tighten wing nut.

The Valve Shop
6070-A Corte Del Cedro
Carlsbad, CA 92011
Tel. 760-438-4840, Fax. 760-438-4836
Email: Sales@TheValveShop.com
Website: www.thevalveshop.com